

Verteiler
Sunnysoft sro
Kovanecka 2390/1a
190 00 Prag 9
Tschechische Republik
www.sunnysoft.cz

Anwendungsleitfaden

Dieses Produkt ist mit einer WLAN-Hotspot-Funktion ausgestattet und kann eine Verbindung zwischen dem Host und dem Mobiltelefon herstellen, ohne den mobilen Datenverkehr zu nutzen.

Schritt 1: Laden Sie die App aus dem mobilen App-Markt herunter (siehe QR-Code für Android und Apple).

Schritt 2: Rufen Sie den Einstellungsbildschirm auf und schalten Sie den WLAN-Schalter um (oder drücken Sie lange auf die Tastenkombination für die Einstellungen auf dem Videovorschau-Bildschirm, um in den WLAN-Modus zu wechseln).

Schritt 3: Schalten Sie die WLAN-Funktion des Mobiltelefons ein und suchen Sie zum Herstellen einer Verbindung nach dem WLAN-Namen mit LNDUXXXX. Das Passwort lautet „12345678“. Schritt 4: Öffnen Sie die mobile App und erleben Sie die wunderbare Interaktion zwischen dem Host und dem Mobiltelefon.

Tasten und Funktionen


Tasten	Kurz drücken	Langes Drücken
Schalten	Wenn Sie kurz drücken, um den schwarzen Bildschirmmodus zu aktivieren, wird der kurze schwarze Bildschirmmodus je nach Beleuchtung Gastgeber	Vom Startmodus in den Herunterfahrmodus, vom Herunterfahrmodus in den Startmodus
Menü/Modus	Kein Videostatusschalter (Echtzeit-Kameraschnittstelle leistungsstarke, schnelle Echtzeit-Kameraschnittstelle lange drücken, um das Tastenfeld einzustellen - Host-Einstellungen) Der Status des Schnittstellen-Videoschalters ist ungültig	Drücken Sie lange die Einstellungstaste auf der Kameraschnittstelle, um die Echtzeit-Panel-Host-Einstellungen schnell wiederzugeben. Der Status des Videoschalters der Schnittstelle ist ungültig. Öffnen Sie das WLAN, damit das Host-WLAN durchsucht werden kann
OK	Nach Auswahl der Zielfunktion wird die Option implementiert OK/Echtzeitlebend-Schnittstelle Aufnahme stoppen und Aufnahme starten	
HOCH	Ausgewählte Funktionen zur Schnittstellenimplementierung	Durch langes Drücken wird die Geschwindigkeitsanzeige aufgerufen. Durch erneutes langes Drücken der ausgewählten Schnittstelle wird die Scroll-Down-Funktion aktiviert, um die Rennschnittstelle aufzurufen. Durch erneutes langes Drücken wird der Bildmodus aufgerufen. Echtzeit
Runter	Auswählen einer Schnittstelle zur Implementierung der Scroll-Down-Funktion	

Laden Sie die App herunter




Motorcycle Dash Cam (M600)

Bedienungsanleitung

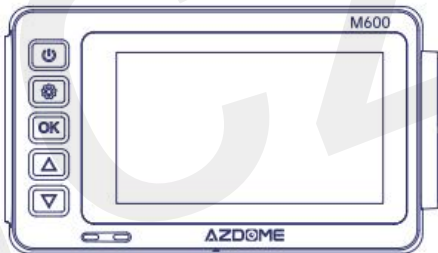

AZDOME


Produktanweisungen

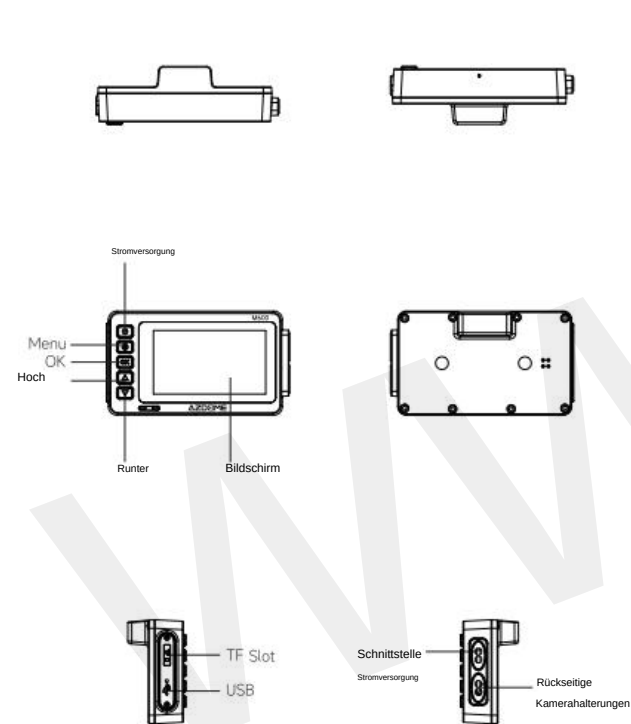

Technische Daten

Name	Technische Daten
Modell	M600
Größe	106,4 mm × 61,2 mm × 33,6 mm
Videoauflösung	1080P
Bildschirm	3.0
GPS	GPS/Beidou-Dualmodus
Kompass	GPS-Kompass
Batterie	Eingebauter Akku
Linsenwinkel	121
Öffnung	F1.8
Videoformat	MP4
Fotoformat	JPG
Erinnerung	TF-Karte (unterstützt max. 512 GB)
MFI	Unterstützung
Sensor	Höhensensor, hohe Höhen Genauigkeit
Stromspannung	5 V
RDKS	Optional
BSD-Algorithmus	Chip-unabhängiger Algorithmus
Arbeitstemperatur	-10°C - 65°C

Packungsinhalt

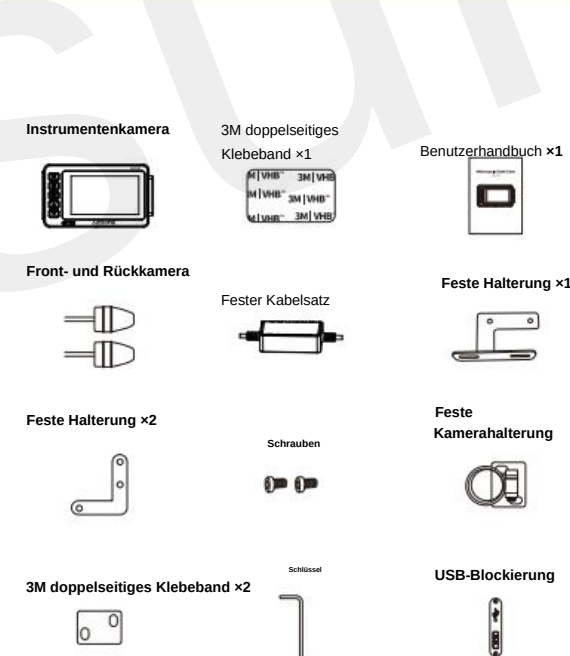


Tipps

1. Dieses Produkt gehört zu den Motorrad-Fahrtenrekorden und kann sich an verschiedene extreme Kopierbedingungen anpassen. Vermeiden Sie jedoch Alkohol, Fett und andere Chemikalien, um eine Beschädigung der wasserdichten Struktur zu vermeiden.
2. Dieses Produkt unterstützt IP67-Wasserdichtigkeit, vermeiden Sie jedoch direktes Waschen mit einer Hochdruckwasserpistole.
3. Bevor Sie dieses Produkt installieren, schalten Sie das Motorrad aus, suchen Sie die beste Position, fixieren Sie die Maschine und schalten Sie dann den ACC des Motorrads ein.
4. Dieses Produkt verwendet einen zyklischen Aufzeichnungsspeichermodus. Wenn wichtige Dateien darauf gespeichert sind, löschen Sie bitte regelmäßig die Videos auf der TF-Karte.

Installationsanleitung




Verbindung

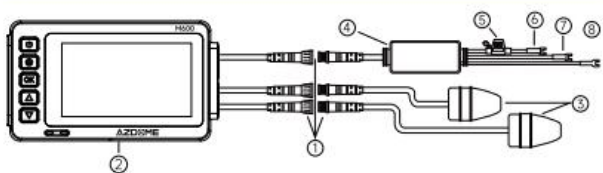


1. Richten Sie beim Anschließen von Peripheriegeräten die Kartensteckplätze aus und schließen Sie sie.
2. M600 Cast
3. Front- und Rückkamera (kurzer Strich ist Frontkamera und langer Strich ist Rückkamera)
4. Netzteil
5. Versicherung
6. Rotes Kabel dient zum Anschluss an den Pluspol der Batterie, konstante Spannung (9 - 40V)
7. Das gelbe Kabel dient zum Anschluss von ACC (Schaltspannung 9 - 40 V).
8. Schwarz ist der Minuspol der Stromversorgung


Beschreibung der M600-Bedienoberfläche

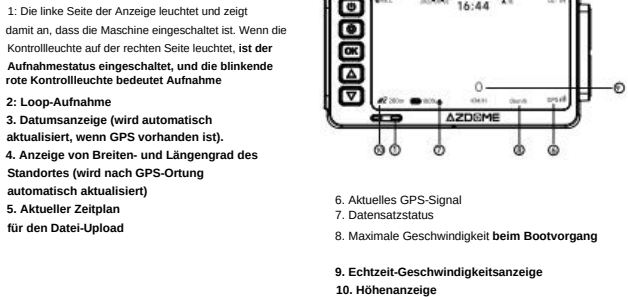

Racing-Schnittstelle

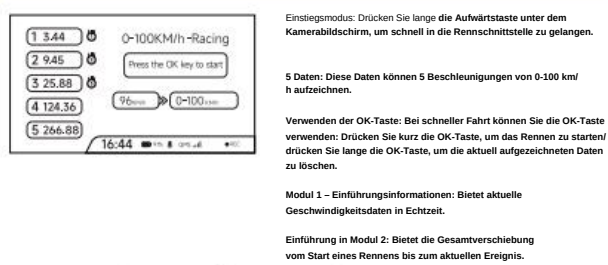

Independent Racing Interface

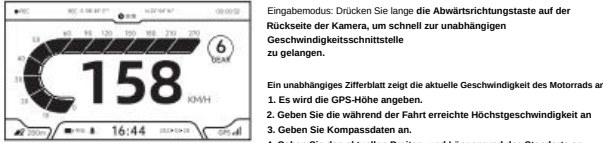

Allgemeine Fehlerbehebung

1. Der Rekorder lässt sich nach dem Laden nicht einschalten
-- Bitte überprüfen Sie, ob das Motorrad eingeschaltet ist und ob die Leitung richtig angeschlossen ist
2. Der Großteil des Videos wird während der Nutzung blockiert
-- Überprüfen Sie, ob die niedrigstmögliche Schwerkräften-Einstellung eingestellt ist.
3. Die Videodatei ist nicht gesperrt.
-- Überprüfen Sie, ob die Einstellung zur Schwerkräften-Erkennung eingeschaltet ist. Wenn ja, stellen Sie die Empfindlichkeit der Schwerkräften-Erkennung auf einen höheren Wert ein.
4. Absturz -- Drücken Sie die Reset-Taste auf der Rückseite des Gehäuses, um einen Neustart des Rekorders zu erzwingen.
5. Keine Aufzeichnung nach dem Öffnen
-- TF-Karte formatieren und den Rekorder neu starten, prüfen, ob die Kamerakabelschnittstelle locker ist.

AZDOME

Name: Motorcycle Dashcam
Company: Shenzhen Lingdu Automotive Electronic Technology Co., LTD
Address: 28-29 / F, Unit 1, Building 1, 1211 Guangang Road, Longhua District, Shenzhen
Service tel: 400-013-0518
Website: www.azdome.com

Manufacturer: Dongguan Lingdu ELECTRONIC Technology Co., LTD
Address: 1 Chenglong Street, Qingxi Town, Dongguan City, Guangdong Province, China
The enterprise has passed ISO9001 quality system certification

The picture on the package is for reference only, please refer to the actual product

APP Operation Guide

This product comes with WIFI hotspot function, can realize the interconnection between host and mobile phone without using mobile phone traffic

Step 1: Download the APP in the mobile app market (see the QR code for Android and Apple)

Step 2: Enter the setting screen and turn on the WIFI switch (or long press the setting shortcut key on the video preview screen to enter the WIFI mode)

Step 3: Turn on the WIFI function of the mobile phone and find the WIFI name with LNDUXXXX for connection. The password is "12345678".

Step 4: Open the mobile APP to realize the wonderful interaction between the host and the mobile phone.

Key and Function

Key and Function		
Button Image	Short Press	Long Press
	On a short press into black screen mode, short black screen mode according to light up the host	Boot mode into shutdown mode, shutdown mode into the boot mode
	No video state switch (real-time camera interface - powerful, fast real-time camera interface long press set key panel - host Settings) interface video switch state is invalid	Long press the setting key on the real-time camera interface to play quickly Panel - host Settings) interface video switch state is invalid. Open WIFI, that host WIFI can be searched
	After selecting the target function, the OK option/real-time preview interface will be implemented to stop recording and start recording	
	Selected interface implementation functions	Long press to enter the speed display interface, long press the selected interface again to realize the scroll down function to enter the racing interface, and long press again to enter the Image head real-time picture mode
	Select the interface to realize the down-scroll function	

APP download

IOS



Android



Notice

CE This product complies with the radio interface requirements of the European Community.

W This symbol means the product must not be discarded as household waste, and should be delivered to an appropriate and recycling helps protect natural resources, human health and the environment. For more information on disposal and recycling of this product, contact your local municipality, disposal service, or the shop where you bought this product.


FCC Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


Motorcycle Dash Cam (M600)

Manual

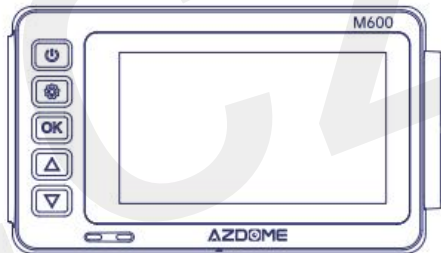

AZDOME

Product Instruction

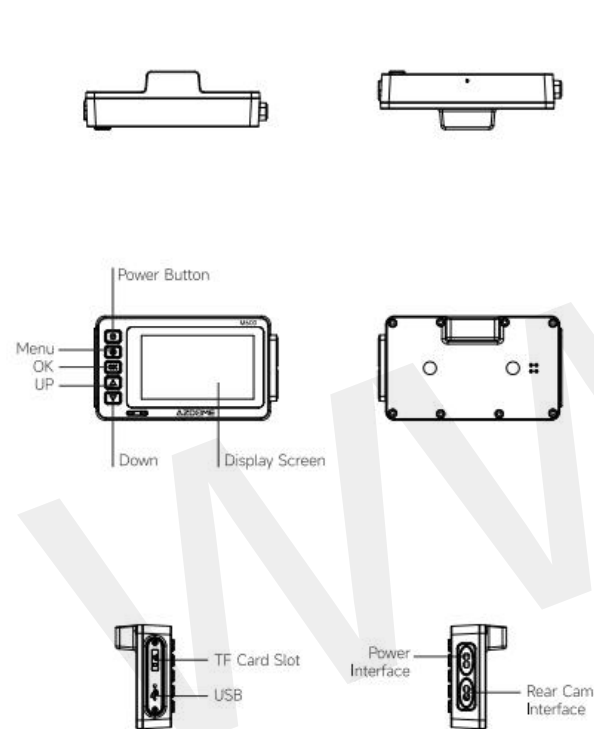


Production specification

Name	Specification
Model	M600
Size	106,4mm*61,2mm*33,6mm
Video Resolution	1080P
Screen	3.0
GPS	GPS/Beidou Dual Mode
Compass	GPS Compass
Battery	Build-in Battery
Lens Angle	121°
Aperture	F1.8
Vedio Format	MP4
Photo Format	JPG
Memory	TFcard(Max Support 512GB)
WIFI	Surpport
Sensor	Gravity sensor , High precision altitude
Voltage	5V
TPMS	Optional
The BSD algorithm	Chip independent algorithm
Working Temperature	-10°C~65°C

Packing List

Check the box for each of the following items before installing the dash cam.

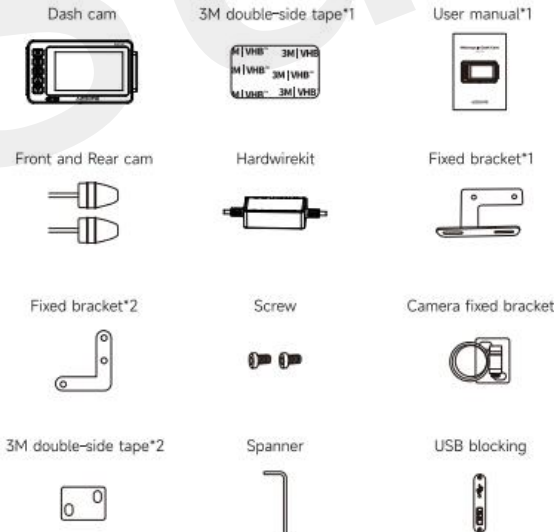


Product Tips

- This product belongs to the motorcycle driving recorder, can adapt to a variety of extreme copying environment, but please avoid alcohol, grease and other chemicals to avoid damaging the waterproof structure.
- This product supports IP67 waterproofing, but avoids direct washing by high pressure water gun.
- Before installing this product, turn off the motorcycle power supply, find the best position, fix the machine, and then turn on the ACC motorcycle power supply.
- This product adopts the storage mode of cyclic recording. If there are important files to save, please clean the TF card video regularly.

Installation Instructions




Wiring Instructions

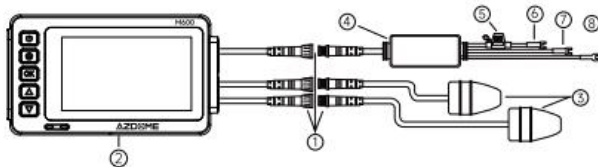


- Align the card slots and close them when connecting peripheral accessories
- M600 Host
- Front and rear cameras
(The short line is the front camera, and the long line is the rear camera)
- Power Pack
- Fuse
- Red is ACC power supply positive
- Orange is the ACC power supply
- Black is the negative terminal of the power supply

M600 Interface Operation Description

- The left side of the indicator is on, indicating that the machine is powered on. If the light on the right is on, the recording status is enabled and the blinking red light is recording
- Loop recording
- Date display (Will be updated automatically when GPS is in place)
- Location latitude and longitude display (automatically updated after GPS positioning)
- Current recording file time progress
- The current GPS signal
- Recording Status
- The maximum speed during the startup process
- Real-time speed display
- Elevation display

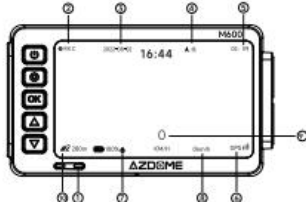

Racing Interface

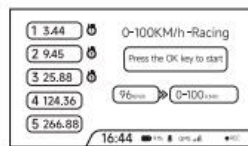

Entry mode: Long press the up key under the camera screen to quickly enter the racing interface.
5 data: This data can record 5 times of accelerated use from 0-100km/h.

Use of OK key: Short press OK key to start racing/long press OK key to clear the currently recorded data.

Module 1 Introduction: Provides current real-time speed data.

Module 2 Introduction: Provides the total displacement from the beginning of a single race to the current occurrence.

Independent Racing Interface



Entry mode: Long press down the direction down key on the camera back surface to quickly enter the independent speed interface

The independent dial displays the current motorcycle speed

- Provide GPS altitude.
- Provide the maximum speed reached during driving
- Provide compass data.
- Provide current latitude and longitude location data.

Common Troubleshooting

- The recorder is not turned on after loading
Please check whether the motorcycle is powered on and the line is connected properly.
- Most of the video is locked during use
Check that the gravity sensing Settings are set to the lowest possible setting.
- The video file is not locked
Check that the gravity sensing setting is turned on, and if it is turned on, turn the gravity sensing sensitivity to a higher level.
- Crash
Press the reset button on the back of the body to forcibly restart the recorder.
- No recording after open
A formatted TF card and recorder restart, check whether the camera cable interface loose.